


BOILER - DEMOLITION
SCALE: 1/4" = 1'-0"

## DEMOLITION NOTES:

- 1. DISCONNECT AND REMOVE LOW PRESSURE STEAM PIPING FROM BOILER TO MAIN ISOLATION VALVE.
- 2. DISCONNECT AND REMOVE COMBUSTION EXHAUST FROM BOILER TO FLUE DUCTWORK.
- 3. DISCONNECT AND REMOVE BOILER FEED WATER TO DEMOLISHED CONDENSATE RETURN.
- 4. DISCONNECT AND REMOVE NATURAL GAS AND FUEL OIL FROM BURNER

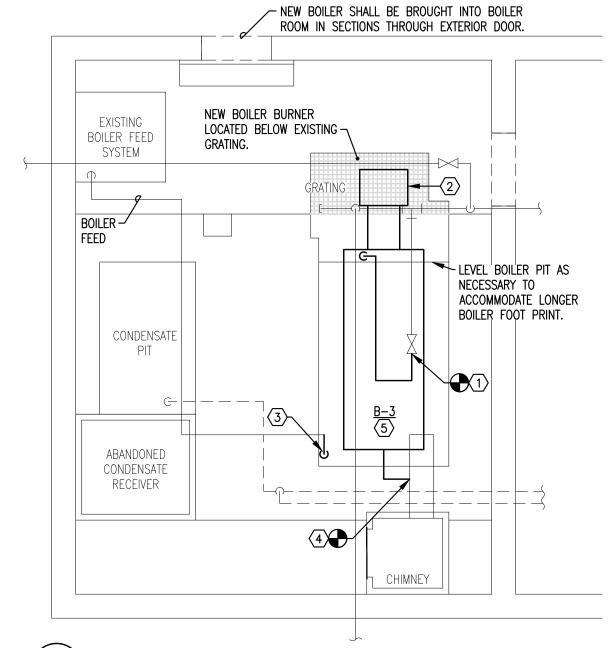

 $\begin{array}{c} 2 \\ \hline \begin{array}{c} \text{BOILER - NEW WORK} \\ \text{SCALE: } 1/4" = 1'-0" \end{array} \end{array}$ 

## CONSTRUCTION NOTES:

- 1. CONNECT NEW LOW PRESSURE STEAM FROM NEW BOILER TO EXISTING MAIN ISOLATION VALVE. PROVIDE NEW BOILER HEADER ACCORDING TO MANUFACTURER SPECIFICATIONS.
- 2. CONNECT EXISTING NATURAL GAS AND FUEL OIL TO NEW BURNER.
- 3. CONNECT EXISTING BOILER FEED TO NEW BOILER.
- 4. CONNECT NEW COMBUSTION EXHAUST TO EXISTING BOILER FLUE.
- 5. NEW BOILER B-3 SHALL BE BURNHAM KV1116 MODEL WITH POWER FLAME MODEL CR3-G0-25 NATURAL GAS/OIL BURNER, OR APPROVED EQUAL.

YORKTOWN COMMUNITY
CENTER

TOWN OF YORKTOWN

1974 COMMERCE ST YORKTOWN HEIGHTS, NY 10598

MICHAEL REILLY JR, PE 6 ROWAN ST #3 NORWALK, CT 06855

Signature and Seal

Professional License No.

Sheet Title

BOILER REPLACEMENT

MWR